
 



Technische Änderungen vorbehalten, alle Angaben ohne Gewähr / Subject to technical modifications; no responsibility is accepted for the accuracy of this information. © EUCHNER GmbH + Co. KG

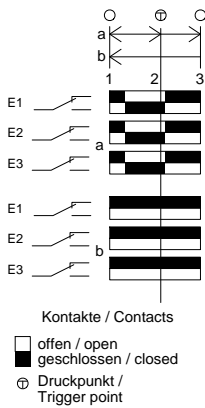


S1  
Taste Reset "C"  
push button Reset "C"



 
S2  
Taste Tippen "-"  
push button jogging "-"




 
S3  
Taste Tippen "+"  
push button jogging "+"



V1  
LED rot/grün  
LED red/green

 

S4  
Zustimmtaster  
enabling push button

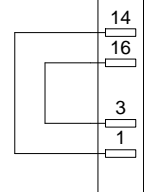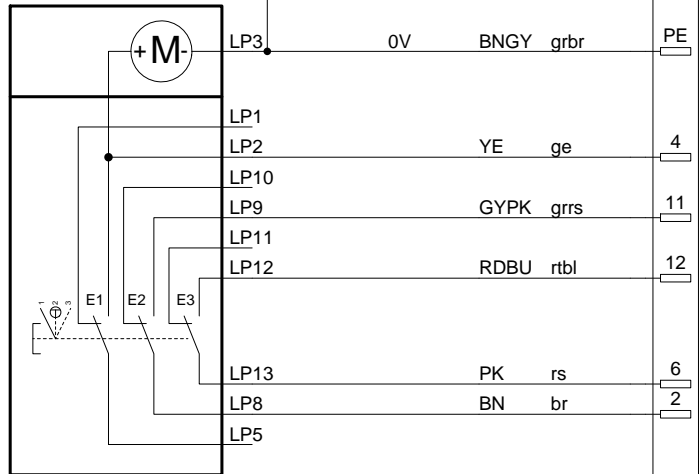

Adern 0,25<sup>2</sup> / wires 0,25<sup>2</sup>

Steckverbinder: Harting, 18 pol., HAN Q  
connector: Harting, 18 pin, HAN Q