


Technische Änderungen vorbehalten, alle Angaben ohne Gewähr / Subject to technical modifications; no responsibility is accepted for the accuracy of this information. © EUCHNER GmbH + Co. KG

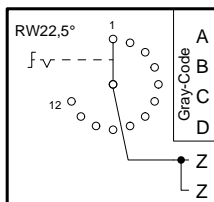


S1	DCBA
1	0000
2	0001
3	0011
4	0010
5	0110
6	0111
7	0101
8	0100
9	1100
10	1101
11	1111
12	1110

**S1**  
Stufenschalter  
12 Stellungen  
selector switch  
12 positions




LP2	YE	ge	
LP1	GN	gn	
LP3	BU	bl	
LP4	GY	gr	
LP5	+24V	RD	rt
LP6			

 **S2**  
Drucktaste "+"  
push button "+"





BK	sw
VT	vi

 **S3**  
Drucktaste "-"  
push button "-"



GYPK	grs
------	-----

**S4**  
Zustimmtaster  
enabling push button

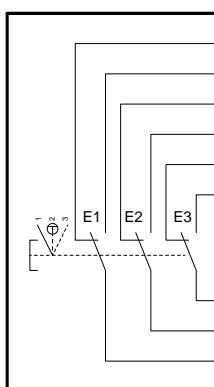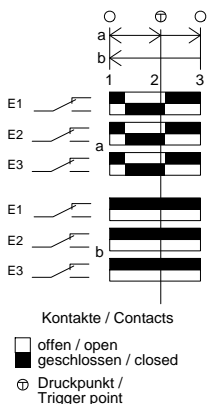

LP1	RDBU	rtbl
LP2		
LP10		
LP9		
LP11		
LP12		
LP13	WH	ws
LP8	BN	br
LP5	PK	rs



Leitung / cable:  
12x0,14mm<sup>2</sup>