

Gültigkeit

Diese Betriebsanleitung gilt für alle Präzisions-Einzelgrenztaster N10/N11. Diese Betriebsanleitung bildet zusammen mit dem Dokument *Sicherheitsinformation* sowie einem ggf. verfügbaren Datenblatt die vollständige Benutzerinformation für Ihr Gerät.

Wichtig!

Beachten Sie, dass Sie die für Ihre Produktversion gültige Betriebsanleitung verwenden. Bei Fragen wenden Sie sich an den EUCHNER Service.

Ergänzende Dokumente

Die Gesamtdokumentation für dieses Gerät besteht aus folgenden Dokumenten:

Dokumenttitel (Dokumentnummer)	Inhalt
Sicherheitsinformation (2525460)	Grundlegende Sicherheitsinformationen
Betriebsanleitung (2501867)	(dieses Dokument)
Konformitätserklärung	Konformitätserklärung
Ggf. Ergänzungen zur Betriebsanleitung	Ggf. zugehörige Ergänzungen zur Betriebsanleitung oder Datenblätter berücksichtigen.

Wichtig!

Lesen Sie immer alle Dokumente durch, um einen vollständigen Überblick für die sichere Installation, Inbetriebnahme und Bedienung des Geräts zu bekommen. Die Dokumente können unter www.euchner.de heruntergeladen werden. Geben Sie hierzu die Dok. Nr. oder die Bestellnummer des Geräts in die Suche ein.

Bestimmungsgemäßer Gebrauch

Präzisions-Einzelgrenztaster werden zum Positionieren und Steuern von Maschinen und Industrieanlagen eingesetzt.

Zum bestimmungsgemäßen Gebrauch gehört das Einhalten der einschlägigen Anforderungen für den Einbau und Betrieb, insbesondere

- EN IEC 60204-1
- EN ISO 12100

Wichtig!

► Liegt dem Produkt ein Datenblatt bei, gelten die Angaben des Datenblatts, falls diese von der Betriebsanleitung abweichen.

Nicht bestimmungsgemäßer Gebrauch

Präzisions-Einzelgrenztaster mit Schaltelement ES502V dürfen nicht in Sicherheitsschaltkreisen eingesetzt werden.

Funktion

Präzisions-Einzelgrenztaster werden zum Positionieren und Steuern im Maschinen- und Anlagenbau eingesetzt.

Das Schaltelement wird über einen Stöbel betätigkt. Entsprechend der Anwendung (Schaltpunktgenauigkeit und Anfahrgeschwindigkeit) werden verschiedene Stöbel und Steuernocken eingesetzt (siehe Bild 3).

Das Betätigen des Stöbels erfolgt durch Steuernocken, die in Nutenprofilen kraftschlüssig befestigt sind.

Montage

HINWEIS

Geräteschäden durch falschen Anbau und ungeeignete Umgebungsbedingungen

- Die Montage darf ausschließlich von autorisiertem Fachpersonal durchgeführt werden.
- Schalter und Betätigter dürfen nicht als Anschlag verwendet werden.
- Schützen Sie den Schalter vor Beschädigung.

► Die angegebene IP-Schutzart gilt nur bei korrekt angezogenen Gehäuseschrauben, Leitungseinführungen und Steckverbindern. Anzugsdrehmomente beachten.

Schutz vor Umgebungseinflüssen

Entlüftungsventile dienen dem Druckausgleich gegen Pumpwirkung der Stöbel. Sie dürfen nicht mit Farbe verschlossen werden.

- Bei Lackierarbeiten Stöbel, Stöbelführung, Entlüftungsventile und Typenschild abdecken!

Umstellen der Betätigungsrichtung




Bild 1: Umstellen der Betätigungsrichtung

1. Arretierschraube herausschrauben.
2. Gewünschte Richtung einstellen.
3. Arretierschraube wieder einschrauben.

Elektrischer Anschluss

Wichtig!

► Isolieren Sie die Einzeldrähte mit einer Länge von 6^{±1} mm ab, um einen sicheren Kontakt zu gewährleisten.

1. Schalterdeckel öffnen.
2. Kabelverschraubung mit entsprechender Schutzart montieren.
3. Anschließen und Klemmen anziehen (Kontaktbelagung siehe Bild 2).
4. Anschlusschrauben der Schaltelemente mit 0,5 Nm anziehen.
5. Auf Dichtheit der Leitungseinführung achten.
6. Schalterdeckel schließen und verschrauben (Anzugsdrehmoment 0,5 Nm).

Funktionsprüfung

Mechanische Funktionsprüfung

- Das Betätigungsselement muss sich leicht bewegen lassen.
- Stöbel betätigen und die Schaltfunktionen überprüfen.

Elektrische Funktionsprüfung

- Korrekten Funktionsablauf prüfen

Kontrolle und Wartung

Um eine einwandfreie und dauerhafte Funktion zu gewährleisten, sind folgende Kontrollen erforderlich:

- einwandfreie Schaltfunktion
- sichere Befestigung aller Bauteile
- präzise Justierung von Steuernocken zu Einzelgrenztaster
- Beschädigungen, starke Verschmutzung, Ablagerungen und Verschleiß
- Dichtheit der Kabeleinführung
- gelockerte Leitungsanschlüsse.

Info: Das Baujahr ist in der unteren, rechten Ecke des Typschilds ersichtlich.

Haftungsausschluss und Gewährleistung

Wenn die o. g. Bedingungen für den bestimmungsgemäßen Gebrauch nicht eingehalten werden oder wenn die Sicherheitshinweise nicht befolgt werden oder wenn etwaige Wartungsarbeiten nicht wie gefordert durchgeführt werden, führt dies zu einem Haftungsausschluss und dem Verlust der Gewährleistung.

Konformitätserklärung

Das Produkt erfüllt die Anforderungen der Maschinenrichtlinie 2006/42/EG.

Die EU-Konformitätserklärung finden Sie unter www.euchner.de. Geben Sie dazu die Bestellnummer Ihres Geräts in die Suche ein. Unter Downloads ist das Dokument verfügbar.

Service

Wenden Sie sich im Servicefall an:

EUCHNER GmbH + Co. KG
Kohlhammerstraße 16
70771 Leinfelden-Echterdingen
Deutschland

Servicetelefon:

+49 711 7597-500

E-Mail:

support@euchner.de

Internet:
www.euchner.de

Technische Daten

Parameter	Wert
Gehäusewerkstoff	Aluminium-Druckguss eloxiert
Stöbelwerkstoff	Stahl, rostfrei
Schutzart	IP67
Mech. Schaltspiele	ES502V
Schalthäufigkeit	ES502V
Umgebungstemperatur	ES502V
Einbaulage	beliebig
Anfahrgeschwindigkeit max.	
Stöbel Dach D	40 m/min
Rollen R (Gleitlager)	80 m/min
Kugel K	10 m/min
Rolle lang	20 m/min
Anfahrgeschwindigkeit min.	0,01 m/min
Betätigungs Kraft	≥ 20 N
Schaltelement	1 Schließer + 1 Öffner
Schaltprinzip	Sprungschaltglied
Hysterese	0,8 mm
Kontaktwerkstoff	Silberlegierung
Anschlussart	Schraubklemmen
Anzugsdrehmoment	0,5 Nm (Schlitzschraube)
Schraubanschluss	
Leiterquerschnitt	0,5 ... 1,5 mm ²
Bemessungsisolationsspannung	U _i = 250 V
Bemessungsstoßspannungsfestigkeit	U _{imp} = 2,5 kV
Gebrauchskategorie Schaltelement nach EN IEC 60947-5-1	
AC-12	230 V 16 A
AC-15	230 V 10 A
DC-13	24 V 6 A
Schaltstrom min. bei DC 24 V	20 mA
Konv. thermischer Strom I _{th}	10 A
Kurzschlusschutz nach EN IEC 60269-1 (Steuersicherung)	16 A gG

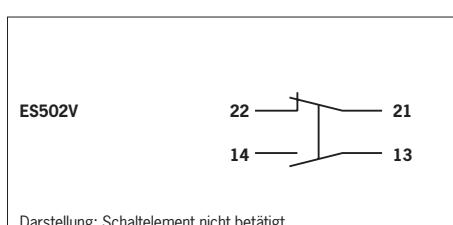


Bild 2: Schaltelement und Anschlussbelegung

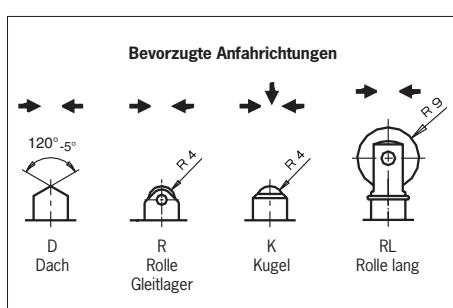


Bild 3: Stöbel und Anfahrrichtungen

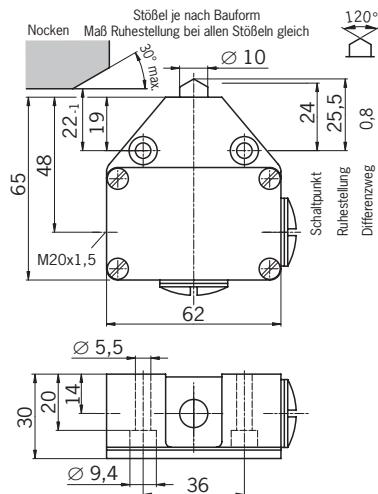


Bild 4: Maßzeichnung N10

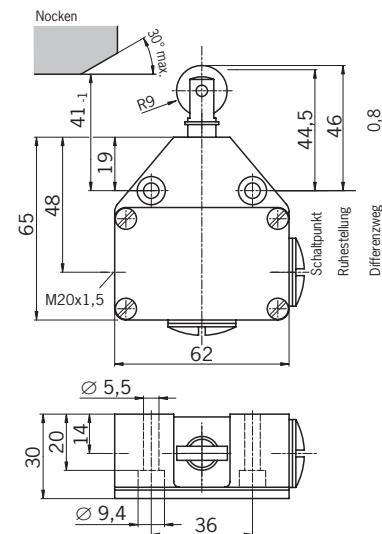


Bild 5: Maßzeichnung N10 mit Rollenstößel lang

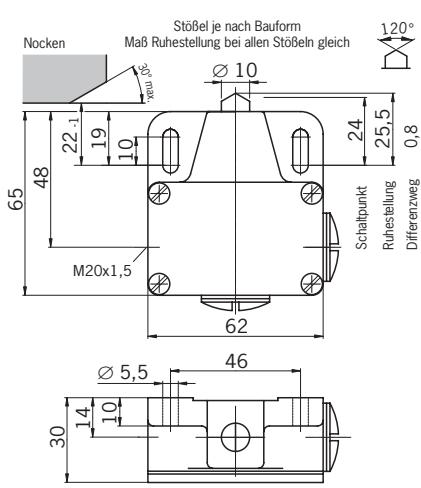


Bild 6: Maßzeichnung N11

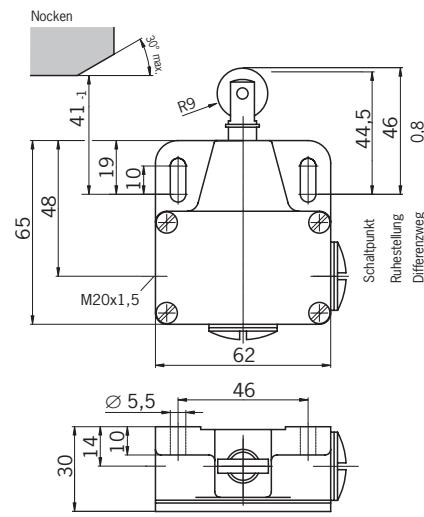


Bild 7: Maßzeichnung N11 mit Rollenstößel lang

Scope

These operating instructions are valid for all precision single limit switches N10/N11. These operating instructions, the document *Safety information* and any available data sheet form the complete user information for your device.

Important!

Make sure to use the operating instructions valid for your product version. Please contact the EUCHNER service team if you have any questions.

Supplementary documents

The overall documentation for this device consists of the following documents:

Document title (document number)	Contents	
Safety information (2525460)	Basic safety information	
Operating instructions (2501867)	(this document)	
Declaration of con- formity	Declaration of conformity	
Any additions to the operating instructions	Take any associated additions to the operating instructions or data sheets into account.	

Important!

Always read all documents to gain a complete overview of safe installation, setup and use of the device. The documents can be downloaded from www.euchner.com. For this purpose, enter the doc. no. or the order number for the device in the search box.

Correct use

Precision single limit switches are used for positioning and controlling machines and industrial installations.

Correct use includes compliance with the relevant requirements for installation and operation, in particular

- EN IEC 60204-1
- EN ISO 12100

Important!

If a data sheet is included with the product, the information on the data sheet applies in case of discrepancies with the operating instructions.

Incorrect use

Precision single limit switches with switching element ES502V must not be used in safety circuits.

Function

Precision single limit switches are used for positioning and control applications in mechanical and systems engineering.

The switching element is actuated via a plunger. Different plunger types and trip dogs are used depending on the application (operating point accuracy and approach speed) (see Fig. 3).

The plunger is actuated by trip dogs that are mounted with an interference fit in trip rails.

Mounting

NOTICE

Device damage due to improper mounting and unsuitable ambient conditions.

- Mounting must be performed only by authorized personnel.
- Switches and actuators must not be used as an end stop.
- Protect the switch against damage.
- The specified IP degree of protection is applicable only if the housing screws, cable entries and plug connectors are properly tightened. Observe the tightening torques.

Protection against environmental effects

Safety venting valves are used to equalize the pressure to protect against the pumping action of the plunger. They must not be sealed with paint.

- Mask plunger, plunger guide, safety venting valves and type label during painting work!

Changing the actuating direction

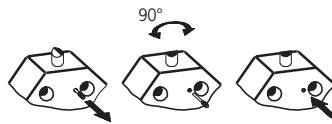


Fig. 1: Changing the actuating direction

1. Unscrew the locking screw.
2. Set the required direction.
3. Screw in the locking screw again.

Electrical connection

Important!

- Strip the insulation from the ends of the individual wires over a length of $6^{\pm}1$ mm to ensure a safe contact.

1. Open switch cover.
2. Fit the cable gland with the appropriate degree of protection.
3. Connect and tighten the terminals (for terminal assignment, see Fig. 2).
4. Tighten screws for connections to the switching element to 0.5 Nm.
5. Check that the cable entry is sealed.
6. Close the switch cover and screw in place (tightening torque 0.5 Nm).

Function test

Mechanical function test

- The actuating element must move easily.
- Actuate plunger and check the switching functions.

Electrical function test

- Check correct function sequence.

Inspection and service

Inspection of the following is necessary to ensure trouble-free long-term operation:

- Correct switching function
- Secure mounting of all components
- Precise adjustment of trip dogs in relation to single limit switch
- Damage, heavy contamination, dirt and wear
- Sealing of cable entry
- Loose cable connections

Info: The year of manufacture can be seen in the bottom right corner of the type label.

Exclusion of liability and warranty

In case of failure to comply with the conditions for correct use stated above, or if the safety regulations are not followed, or if any servicing is not performed as required, liability will be excluded and the warranty void.

Declaration of conformity

The product complies with the requirements according to Machinery Directive 2006/42/EC.

The EU declaration of conformity can be found at www.euchner.com. Enter the order number of your device in the search box. The document is available under Downloads.

Service

If servicing is required, please contact:

EUCHNER GmbH + Co. KG
Kohlhammerstraße 16
70771 Leinfelden-Echterdingen
Germany

Service telephone:

+49 711 7597-500

E-mail:

support@euchner.de

Internet:

www.euchner.com

Technical data

Parameter	Value
Housing material	Die-cast aluminum, anodized
Plunger material	Stainless steel
Degree of protection	IP67
Mech. operating cycles	ES502V 30×10^6
Switching frequency	ES502V 300 min ⁻¹
Ambient temperature	ES502V -5 ... +80 °C
Installation position	Any
Approach speed, max.	
Plunger Chisel D	40 m/min
Roller R (slide bearing)	80 m/min
Ball K	10 m/min
Extended roller	20 m/min
Approach speed, min.	0.01 m/min
Actuating force	≥ 20 N
Switching element	1 NO + 1 NC contact
Switching principle	Snap-action switching contact
Hysteresis	0.8 mm
Contact material	Silver alloy
Connection	Screw terminals
Tightening torque of screw terminal	0.5 Nm (slot head screw)
Conductor cross-section	0.5 ... 1.5 mm ²
Rated insulation voltage	$U_i = 250$ V
Rated impulse withstand voltage	$U_{imp} = 2.5$ kV
Utilization category of switching element acc. to EN IEC 60947-5-1	
AC-12	230 V 16 A
AC-15	230 V 10 A
DC-13	24 V 6 A
Switching current, min., at DC 24 V	20 mA
Convent. thermal current I_{th}	10 A
Short circuit prot. acc. to EN IEC 60269-1 (control circuit fuse)	16 A gG

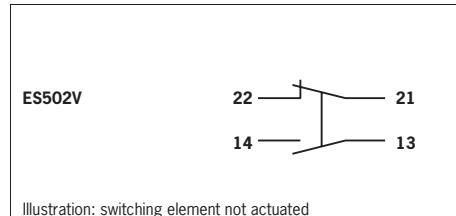


Fig. 2: Switching element and terminal assignment

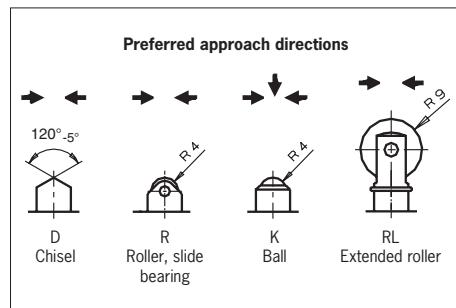


Fig. 3: Plungers and approach directions

Operating instructions

Precision Single Limit Switch N10/N11

EUCHNER

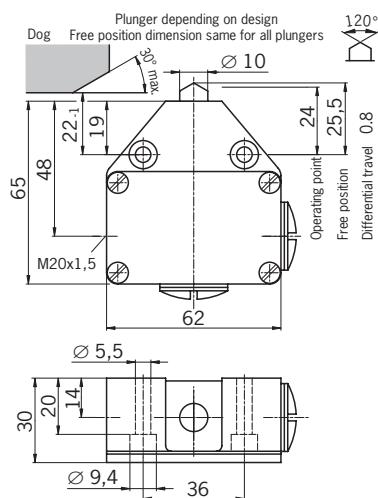


Fig. 4: Dimension drawing for N10

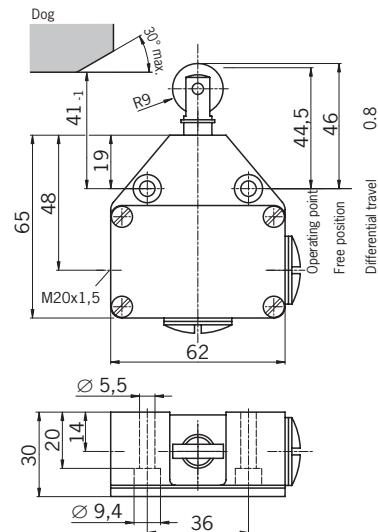


Fig. 5: Dimension drawing for N10 with extended roller plunger

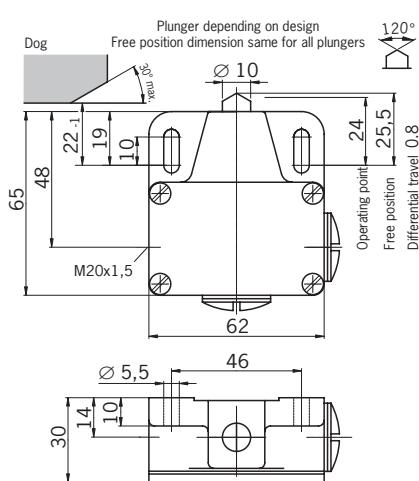


Fig. 6: Dimension drawing for N11

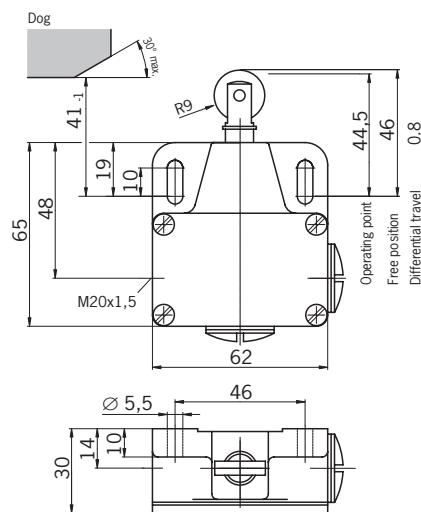


Fig. 7: Dimension drawing for N11 with extended roller plunger