

Connection of CET3-AR to Siemens ET 200S



Content

Guard locking spring applied – power on released according to EN ISO 14119 (closed-circuit current principle) Components/modules used	
EUCHNER	
Other	. 2
Functional description	. 3
General	
Connections	
Safety assessment	. 3
Parameter assignment in the control system	. 5
Output 4 F-DO	
Input 4/8 F-DI	6
Important note – please observe carefully!	8
Subject to technical modifications, no responsibility is accepted for the accuracy of this information. © EUCHNER 2016	



More than safety.

Guard locking spring applied – power on released according to EN ISO 14119 (closed-circuit current principle)

 Safety function
 Guard locking for personal protection according to EN ISO 14119

 Reliability figures according to EN ISO 13849
 Category 4, PL e

Components/modules used

EUCHNER

Description	Order no./ item designation
Safety switches with guard locking and guard lock	109401 / CET3-AR-CRA-AH-50X-SG-109401
monitoring with transponder technology	112921 / CET3-AR-CRA-CH-50F-SG-C2333-112921
	113139 / CET3-AR-CRA-AH-50X-SG-C2290-113139
	113958 / CET3-AR-CRA-CH-50F-SG-C2357-113958
	113965 / CET3-AR-CRA-AH-50F-SG-113965
	114090 / CET3-AR-CDA-CH-50X-SG-114090
	114508 / CET3-AR-CRA-AH-50F-SG-C2333-114508
	114512 / CET3-AR-CRA-AH-50X-SG-C2333-114512

Tip: More information and downloads about the above mentioned EUCHNER products can be found at <u>www.EUCHNER.de</u>. Simply enter the order number into the search field.

Other

Description	Items
ET 200S, Interface module IM151-3 PN HF	6ES7151-3BA23-0AB0
SIMATIC DP, Power module PM-E	6ES7138-4CA01-0AA0
Digital electronic module 4/8 F-DI DC24V	6ES7138-4FA00-0AB0
PROFIsafe	6ES7138-4FA03-0AB0
	6ES7138-4FA04-0AB0
Digital electronic module 4 F-D0 DC24V/2A	6ES7138-4FB03-0AB0
PROFIsafe; P-/M-switching	6ES7138-4FB04-0AB0
Digital electronic module 8 DI DC24V	6ES7131-4BF00-0AA0

Subject to technical modifications, no responsibility is accepted for the accuracy of this information. © EUCHNER 2016



Functional description

General

The CET3 is a guard locking device according to EN ISO 14119 using the closed-circuit current principle. In this example, the guard locking is controlled by a safe output from a Siemens control system. The two safe outputs of the CET3 are connected to a safe input of an ET 200S.

Connections

Designation	Function	Use in this example
OA, OB	Safety outputs. HIGH when the safety guard is closed and locked.	Switch-off of at least one of the outputs must lead to shutdown of the machine or installation via the connected control system.
		Important: The actual shutdown of the energy which is causing a hazard in a machine is not shown in the example and must be supplemented.
IA, IB	Inputs for series connection of AR devices from EUCHNER.	Connected to 24 V DC; function is not used.
+UCM, OV (UCM)	Control input for guard locking solenoid. Connect guard locking to 24 V DC to open.	Dual-channel controlled by an F-DO output. Important: According to EN ISO 14119, it shall be ensured that the hazard caused by a machine has disappeared before the guard locking can be released
OUT	Monitoring output. HIGH when outputs OA and OB are switched on (safety guard closed and locked).	Connected to a standard input of the ET 200S.
OUTD	Door monitoring output. HIGH when the actuator is within the operating distance and the CET is ready for controlling guard locking (safety guard closed).	Connected to a standard input of the ET 200S.
LED1	Input for controlling the installed red LED.	Important: The LED must only be connected parallel with the solenoid (see Figure 1). Control by a separate standard output is not possible (potential reference).
RST	Input for resetting the switch	Connected to ground; function is not used.
J	Teach-in input	Only for ID No. 109401, 113139, 113965, 114508, 114512.
		The corresponding input must be connected to 24 V DC for actuator teach-in (for this purpose, see the operating instructions ¹).
		Important: for teach-in operation terminal OV (UCM) has to be connected to OV not to a different potential or to an output.
		The input must be unconnected during operation.
_	Input not connected	Only for ID No. 112921, 113958, 114090 This input must always be connected to GND.

1) You can find the current operating instructions on the Internet at <u>www.euchner.de</u>. Simply enter the order number into the search field.

Safety assessment


The CET3 features complete monitoring for faults in the safety-relevant parts and in the connected cables (clock pulses at outputs OA and OB). With the device's own pulsing, switch-off or non-connection of the clock signals from the control system's safe inputs does not lead to a reduction in the PL. The example achieves PL e in accordance with EN ISO 13849-1 for position monitoring of the locking mechanism of guard locking.

A safety assessment for control of guard locking is not part of this example and must be supplemented for the respective machine by the design engineer in accordance with the risk assessment.

Subject to technical modifications, no responsibility is accepted for the accuracy of this information. © EUCHNER 2016 AP000101-06 03/16



Principle circuit diagram

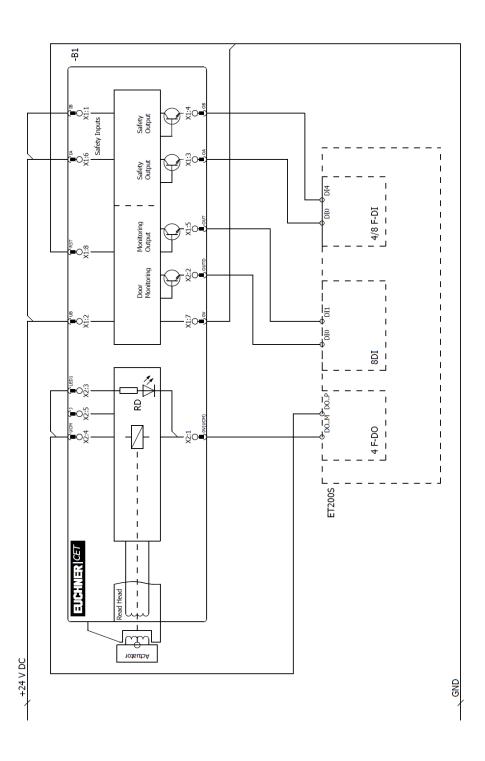



Parameter assignment in the control system

Output 4 F-DO

This parameter assignment applies only for the following assemblies:

- 6ES7138-4FB03-0AB0
- 6ES7138-4FB04-0AB0

Parameter	Value
F-Parameter	Corresponding to the use in Profibus/Profinet
Behavior after channel faults	Optional
Read-back time	1 (ms)
Diagnostics: wire break	Activated

Properties - 4 F-DO DC24V/2A - (R-/S2) General Addresses Parameters	×
Parameter Parameters Module parameter Behavior after channel faults DO channel 0 Read-back time Diagnostics: wire break DO channel 1 DO channel 2 DO channel 3	Value Passivate the entire module
ОК	Cancel Help



Input 4/8 F-DI

This parameter assignment applies only for the following assemblies:

- 6ES7138-4FA03-0AB0
- 6ES7138-4FA04-0AB0

Parameter	Value
F-Parameter	Corresponding to the use in Profibus/Profinet
Input delay	3 (ms) or longer
Short-circuit test	Cyclic
Behavior after channel faults	Optional
Sensor supply	External
Evaluation of the sensors	1oo2 evaluation
Type of sensor interconnection	2 channel equivalent
Other parameters	Optional

General Addresses Parameters Parameter Parameters Parameters Module parameter Image: Short-circuit test Image: Short-circuit test Image: Short-circuit test Image: Short-circ	Value 3 (ms) cyclic Passivate the entire module external 1002 evaluation 2 channel equivalent Supply last valid value 10 Test 0-Signal not necessary
ОК	Cancel Help



Input 4/8 F-DI (continued)

This parameter assignment applies only for the following assemblies:

• 6ES7138-4FA00-0AB0

Value
Corresponding to the use in Profibus/Profinet
3 (ms) or longer
Lock
Optional
1oo2 evaluation
2 channel equivalent
Optional

Parameter Parameters P-parameters Module parameter Module parameter Short-circuit test Behavior after channel faults Channel 0, 4 Evaluation of the sensors Discrepancy time (ms) Channel 1, 5 Channel 2, 6 Channel 3, 7	Value 3 (ms) lock Passivate the entire module
--	---



Important note - please observe carefully!

This document is intended for a design engineer who possesses the requisite knowledge in safety engineering and knows the applicable standards, e.g. through training for qualification as a safety engineer. Only with the appropriate qualification is it possible to integrate the introduced example into a complete safety chain.

The example represents only a part of a complete safety chain and does not fulfill any safety function on its own. In order to fulfill a safety function, the energy switch-off function for the hazard location and the software within the safety evaluation must also be considered, for example.

The introduced applications are only examples for solving certain safety tasks for protecting safety guards. The examples cannot be comprehensive due to the application-dependent and individual protection goals within a machine/installation.

If questions pertaining to this example remain open, please contact us directly.

In accordance with Machinery Directive 2006/42/EC, the design engineer of a machine or installation is obligated to perform a risk assessment and take measures to reduce the risk. When doing this, the engineer must comply with the applicable national and international standards. Standards generally represent the current state of the art. Therefore, the design engineer should continuously inform himself about changes in the standards and adapt his considerations to them. Relevant standards include EN ISO 13849 and EN 62061. This application must be regarded only as assistance for the considerations about safety measures.

The design engineer of a machine/installation is obligated to assess the safety technology himself. The examples must not be used for assessment, because only a small excerpt of a complete safety function was considered in terms of safety engineering here.

In order to be able to use the safety switch applications correctly on safety guards, it is indispensable to observe the standards EN ISO 13849-1, EN ISO 14119 and all relevant C-standards for the respective machine type. Under no circumstances does this document replace the engineer's own risk assessment, and it cannot serve as the basis for a fault assessment.

Particularly in case of a fault exclusion, it must be noted that this can be performed only by the design engineer of a machine or installation and requires a reason. A general fault exclusion is not possible. More information about fault exclusion can be found in EN ISO 13849-2.

Changes at products or within assemblies from third-party suppliers used in this example can lead to the function no longer being ensured or the safety assessment having to be adapted. In any event, the information in the operating instructions on the part of EUCHNER, as well as on the part of third-party suppliers, must be taken as the basis before this application is integrated into an overall safety function. If contradictions should arise between the operating instructions and this document, please contact us directly.

Use of brand and company names

All mentioned brand and company names are property of the respective manufacturers. The use is only for clear identification of compatible peripheral devices and environment of operation in combination with our products.

EUCHNER GmbH + Co. KG · Kohlhammerstraße 16 · 70771 Leinfelden-Echterdingen Telefon: +49 711 75 97 -0 · Telefax: +49 711 75 97 -303 · info@euchner.de · <u>www.euchner.de</u>

Subject to technical modifications, no responsibility is accepted for the accuracy of this information. © EUCHNER 2016