

Connection of CES-FD to MURR MVK-MPNIO



Content

Interlocking device according to EN ISO 14119	2
Components/modules used.....	2
EUCHNER	2
Other	2
Functional description	3
General.....	3
Connections	3
Safety assessment	3
Principle circuit diagram.....	4
Parameter assignment in the control system	5
Input MVK-MPNIO F DI8/4 F DO4 or MVK-MPNIO F DI16/8.....	5
Important note – please observe carefully!.....	6

Interlocking device according to EN ISO 14119

Safety function Interlocking device according to EN ISO 14119

Reliability figures according to EN ISO 13849 Category 4, PL e

Components/modules used

EUCHNER

Description	Order no./item designation
Evaluation Unit	115534 / CES-FD-AP-M-01-USI-115534 from V1.0.0 119865 / CES-FD-AP-U-01-USI-119865 from V1.0.0
Read Head	077790 / CES-A-LMN-SC

Tip: More information and downloads about the above mentioned EUCHNER products can be found at www.EUCHNER.de. Simply enter the order number into the search field.

Other

Description	Items
MVK-MPNIO F DI8/4 F DO4 Safety-Module	55563 55561
MVK-MPNIO F DI16/8 Safety-Module	55562 55560

Functional description

General

The CES-FD is part of an interlocking device in accordance with EN ISO 14119. The two safe outputs of the CES-FD are connected to an MVK-MPNIO Safety-Module.

Connections

Designation	Function	Use in this example
F01A, F01B	Safety outputs. HIGH when the safeguarding device is closed and the actuator is in operating distance.	Switch-off of at least one of the outputs must lead to shutdown of the machine or installation via the connected control system. Important: The actual shutdown of the energy which is causing a hazard in a machine is not shown in the example and must be supplemented.

Safety assessment

The CES-FD features complete monitoring for faults in the safety-relevant parts and in the connected cables (clock pulses at outputs FO1A and FO1B). With the device's own pulsing, switch-off or non-connection of the clock signals from the MVK-MPNIO Safety-Module safe inputs does not lead to a reduction in the PL. Therefore, PL e in accordance with EN ISO 13849-1 can be achieved for position monitoring of a safety guard and for interlocking (preventing the operation of a machine element under certain conditions).

Parameter assignment in the control system

PROFIsafe	Value
	According to the specific application and requirements from Murr electronic (see manual)

Input MVK-MPNIO F DI8/4 F DO4 or MVK-MPNIO F DI16/8

This parameter assignment applies only for the following assemblies:

- **MVK-MPNIO F DI8/4 F DO4 Safety-Module - 55563 or 55561**
- **MVK-MPNIO F DI16/8 - 55562 or 55560**

Parameter	Value
DI 4 Pin 2	active
DI 4 Pin 4	active
Test signal Pin 5 to Pin 2	inactive
Test signal Pin 1 to Pin 4	inactive
Sensor analysis	1oo2
Sensor valence	2 channel equivalent
Discrepancy error behavior	optional
Discrepancy time	optional
Discrepancy error correction	optional
Input delay time	10 ms
Debouncing time	inactive
Check time	optional
Stabilization time	optional

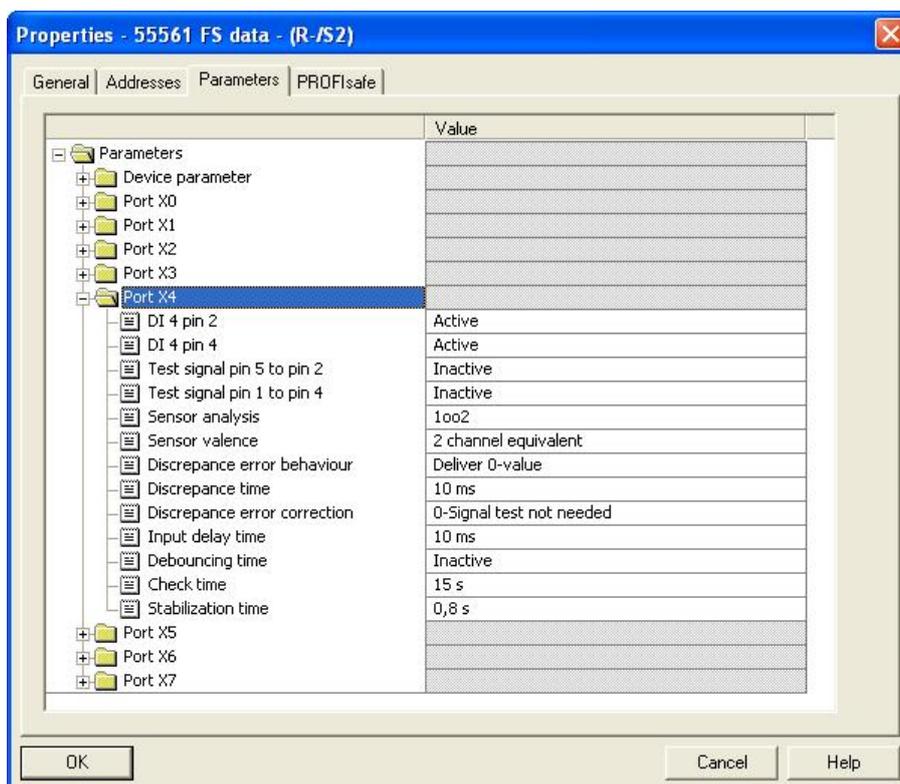


Figure 2

Subject to technical modifications, no responsibility is accepted for the accuracy of this information. © EUCHNER 2015

Important note – please observe carefully!

This document is intended for a design engineer who possesses the requisite knowledge in safety engineering and knows the applicable standards, e.g. through training for qualification as a safety engineer. Only with the appropriate qualification is it possible to integrate the introduced example into a complete safety chain.

The example represents only a part of a complete safety chain and does not fulfill any safety function on its own. In order to fulfill a safety function, the energy switch-off function for the hazard location and the software within the safety evaluation must also be considered, for example.

The introduced applications are only examples for solving certain safety tasks for protecting safety guards. The examples cannot be comprehensive due to the application-dependent and individual protection goals within a machine/installation.

If questions pertaining to this example remain open, please contact us directly.

In accordance with Machinery Directive 2006/42/EC, the design engineer of a machine or installation is obligated to perform a risk assessment and take measures to reduce the risk. When doing this, the engineer must comply with the applicable national and international standards. Standards generally represent the current state of the art. Therefore, the design engineer should continuously inform himself about changes in the standards and adapt his considerations to them. Relevant standards include EN ISO 13849 and EN 62061. This application must be regarded only as assistance for the considerations about safety measures.

The design engineer of a machine/installation is obligated to assess the safety technology himself. The examples must not be used for assessment, because only a small excerpt of a complete safety function was considered in terms of safety engineering here.

In order to be able to use the safety switch applications correctly on safety guards, it is indispensable to observe the standards EN ISO 13849-1, EN ISO 14119 and all relevant C-standards for the respective machine type. Under no circumstances does this document replace the engineer's own risk assessment, and it cannot serve as the basis for a fault assessment.

Particularly in case of a fault exclusion, it must be noted that this can be performed only by the design engineer of a machine or installation and requires a reason. A general fault exclusion is not possible. More information about fault exclusion can be found in EN ISO 13849-2.

Changes at products or within assemblies from third-party suppliers used in this example can lead to the function no longer being ensured or the safety assessment having to be adapted. In any event, the information in the operating instructions on the part of EUCHNER, as well as on the part of third-party suppliers, must be taken as the basis before this application is integrated into an overall safety function. If contradictions should arise between the operating instructions and this document, please contact us directly.

Use of brand and company names

All mentioned brand and company names are property of the respective manufacturers. The use is only for clear identification of compatible peripheral devices and environment of operation in combination with our products.